

KBR-1500

External Printer Connection



The Kolibri KBR-1500 provides the option to display the report on the screen and print it if external printer is connected (printer not included).


The thermal printer can be bought from the third party company and be connected via printer adapter (comes with the unit) to the unit.

Below please see instructions on how to connect external printer to the Kolibri KBR-1500.

1. Please locate printer adapter that comes with the unit.



2. Please connect the RJ-11 end of the adapter cable to the RJ-11 port at the back of the KBR-1500.

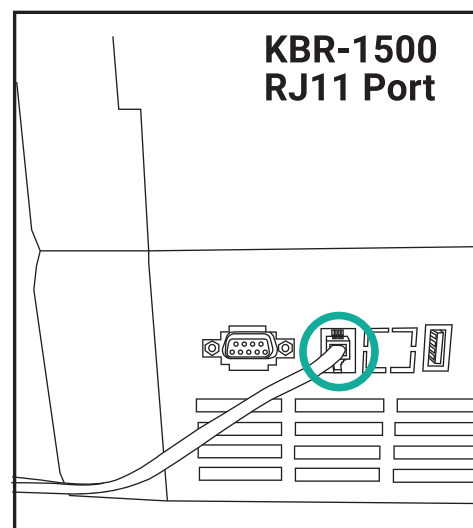


KBR-1500

External Printer Connection



3. Connect one end of the printer cable (comes with printer) to the printer while RS-232 end of the printer cable must be connected to the RS232 end of the adapter cable.

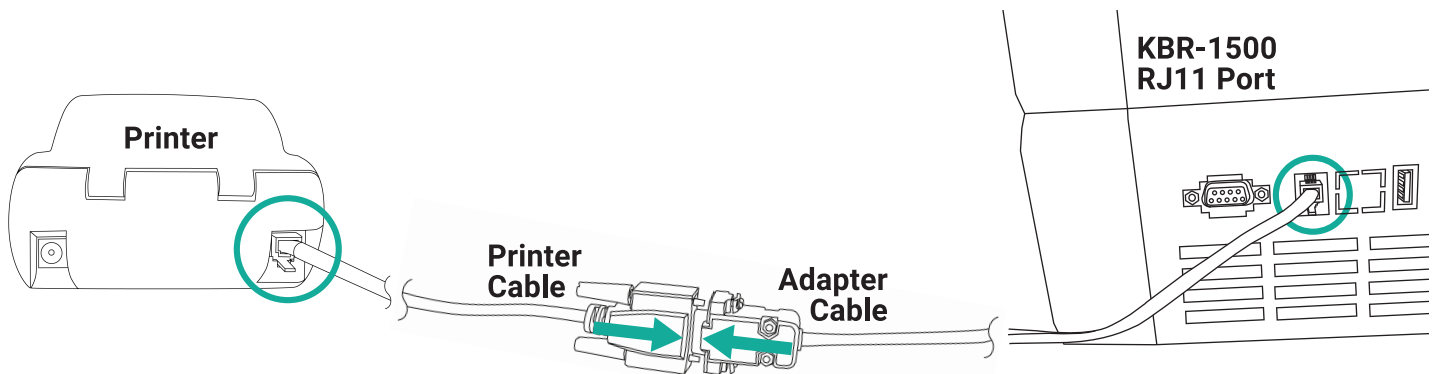

4. After the connection process is successfully done, make sure the Kolibri KBR-1500 and the printer are both on. Count the stack of mixed denomination bills, when done, press report button on the display and then print button to print the report displayed on the screen.
5. If you have any issues with the connectivity of the printer, please contact us any time at KolibriUSA.com/faq-kbr1500/