


## KOLIBRI BISHOP BILL LOADING GUIDE

To ensure top performance, we have listed the following steps on proper bill loading for the Kolibri Bishop:

I. Avoid inserting a bill that is:

- Torn
- Heavily Worn
- Crumpled
- Covered with adhesive tape
- Stapled

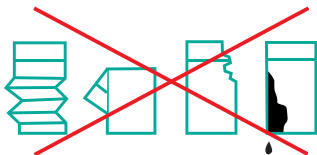

II. Ensure the bill is flat and corners are not folded (the Bishop can recognize the size of a bill and may reject a bill that is folded or has folded corners).

III. Proper bill placement on the Kolibri Bishop is aligned left with the bill facing up in the orientation shown below:



Several factors can cause the Kolibri Bishop not to recognize a genuine bill or cause a false reject:

- Bill inserted in the wrong orientation.
- Overly wrinkled, overly creased, and overly worn bills.
- Knocking over or dropping the unit.
- A sudden change in temperature or humidity.
- Extended period of non-use.
- Lack of maintenance.

If the Kolibri Bishop consistently refuses to recognize genuine bills, turn the unit off and unplug it from the wall. Use an air duster to remove the dust from the sensors as described in the user manual. Reinsert the plug and turn the machine back on.

Because of the printing method used by the US Mint and the deterioration of most currency over time, bills are not exactly identical. This will occasionally cause a bill not to be recognized on the first run in an automatic counterfeit detector. If it recognizes a bill after the second or third attempt, you can be assured the bill is genuine.

Thank you for purchasing with Kolibri USA.  
We strive to help keep your business protected  
and we sincerely hope you enjoy using  
your new Kolibri Bishop